

Quick Start - Graphic Button Overview

Your ScanPro 2000 uses graphic buttons to control the features of the scanner. This is a quick overview to get you started.

View



Film Orientation CLICK to rotate the camera 90° to match the orientation of the image on the film (insures maximum resolution)



Previous Next Automatically moves the roll film one image for each CLICK of the Arrow button. CLICK the Stop button to cancel film.



Film Type CLICK to select Negative or Positive film image (also selects Micro opaque if that option is present).



Rotate 90° CLICK to rotate the image on the screen (each click rotates the image on the view screen 90°).



Manual Straighten CLICK "-" or "+" to jog the image to a straight position.



Zoom CLICK the down or up arrows to change the optical magnification (size of the viewed image).



Mirror CLICK to mirror the image on the view screen.



Help CLICK to enable the Help cursor, then CLICK any button in for more information. The Help button appears on every TAB.

Adjust



 
Focus CLICK the "-" and "+" buttons to change focus or CLICK AF to automatically focus. The normal scanner mode is auto focus, AF.



Previous Next Automatically move the roll film one image for each CLICK of the Arrow button. CLICK the Stop button to cancel film movement.



Brightness CLICK the AB button to automatically adjust image brightness and contrast or CLICK the down and up buttons to manually change image brightness.



Scan Mode CLICK to toggle: 1. Enhanced Gray scale (recommended). 2. Gray scale. 3. Black & White.



Contrast CLICK the down and up buttons to manually change image contrast.



SPOT-Edit CLICK the SPOT-Edit button to open the SPOT-Edit drawing tools. (Make sure to have the Brightness and Contrast buttons next to the SPOT-Edit button.)



Magnifier CLICK the magnifier button to open the magnifier window. CLICK and drag the blue magnifier "box" to view enlarged text and images.



SPOT-Edit drawing tools CLICK the pencil tool to draw around the area to be edited. Adjust brightness and contrast, select erase or redact. CLICK X to restore.

Print or Scan



Previous Next Automatically move the roll film one image for each CLICK of the Arrow button. CLICK the Stop button to cancel film movement.



Scan USB CLICK to save the image within the green crop box to the USB Drive.



Print CLICK to send the image within the green crop box to the Printer (local or network printer). You can also print to a paper size drawer on a printer.

Setup



Setup No access